
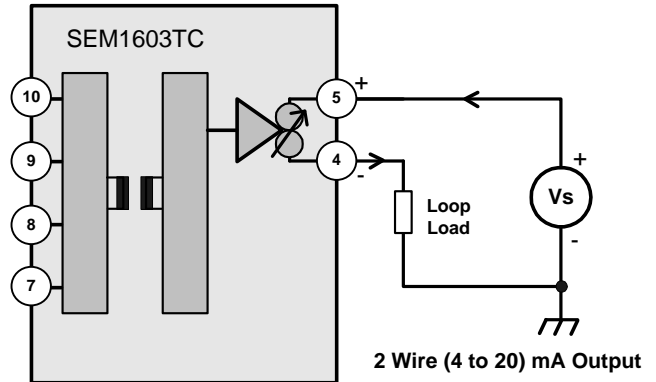


## SEM1603TC USER GUIDE

DIN RAIL MOUNTED TRANSMITTER  
 THERMOCOUPLE INPUT  
 TWO WIRE (4 to 20) mA OUTPUT

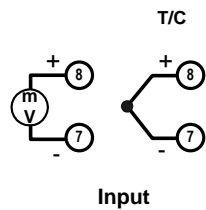

**Important - Please read this document before installing.**

Every effort has been taken to ensure the accuracy of this document, however we do not accept responsibility for damage, injury, loss or expense resulting from errors and omissions, and we reserve the right of amendment without notice.



### IMPORTANT - CE & SAFETY REQUIREMENTS

Product must be DIN rail mounted, inside a suitable enclosure providing environmental protection to IP65 or greater.

To maintain CE EMC requirements, input wires must be less than 30 meters.

The product contains no serviceable parts, or internal adjustments. No attempt must be made to repair this product. Faulty units must be returned to supplier for repair.

This product must be installed by a qualified person. All electrical wiring must be carried out in accordance with the appropriate regulations for the place of installation.

Before attempting any electrical connection work, please ensure all supplies are switched off.

ABSOLUTE MAXIMUM OPERATING CONDITIONS (To exceed may cause damage to the unit) :-

Supply Voltage	± 30 VDC (Protected for over voltage and reverse connection)
Current with over voltage	± 200 mA
Input Voltage	± 5 V between any terminals
Input Current	± 100 mA between terminals 7 & 10
Ambient	Temperature (-30 to 75) °C Humidity (10 to 95) % RH (Non condensing)

### PRODUCT SPECIFICATION

Please refer to the product data sheet for full specification, available to download at [www.statinst.com](http://www.statinst.com).


### RECEIVE AND UNPACKING

Please inspect the packaging and instrument thoroughly for any signs of transit damage. If the instrument has been damaged, please notify your supplier immediately.

### CONFIGURATION




**IMPORTANT -** The SEM1603TC can be configured while connected and powered, but a portable battery powered computer must be used to avoid the effects of ground loops.

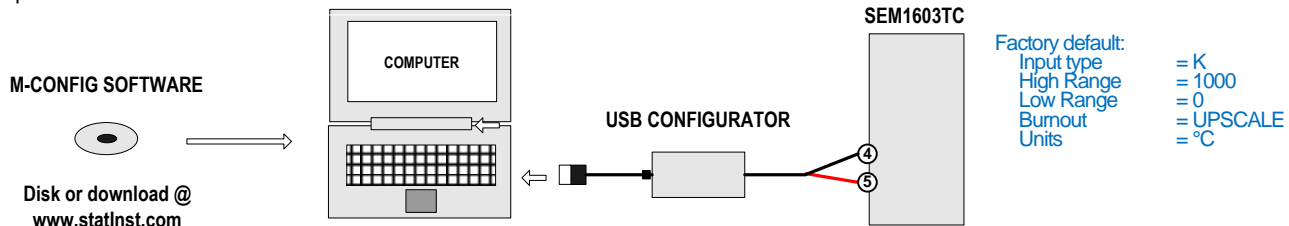

The transmitter may be purchased pre-configured, if specified at the time of order. The user can re-configure the transmitter by using our USB configurator tool (USB KIT). Connect the configurator to the PC USB port then connect the solid gray wire to terminal 5 (+) and the black striped wire to terminal 4 (-). Then run the Status Instruments USB\_CONFIG software, available free from [www.statinst.com](http://www.statinst.com). The USB port supplies power to the SEM1603TC during configuration, no additional wiring is required. The following parameter can be configured by simply entering as prompted by the software package.


- Input type (K, J, E, N, T, R, S, mV)
- Low range
- High range
- Units (°C, °F, mV)
- Burnout (direction of output current on sensor burnout)

## MECHANICAL INSTALLATION

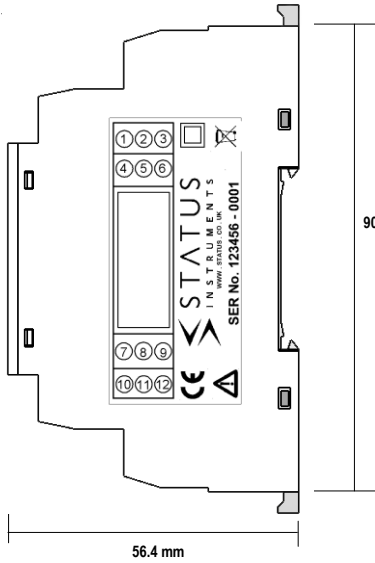

### MOUNTING

- 1 Screw driver
- 2 EN50022 DIN RAIL

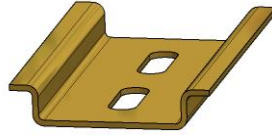


+ 70 °C Max

- 20 °C Min

### SEM1603 Enclosure


Style	DIN 43880 (1 module width)
Material	Polyamide 6.6 self extinguishing
Terminals	Screw terminal
Cable	2.5 mm Max
Color	Gray

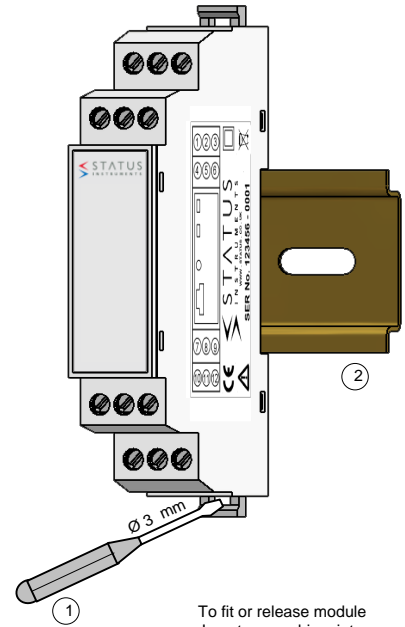


To fit or release module  
Insert screw driver into  
slot and lever latch  
away from body

## ELECTRICAL INSTALLATION
 
### Screw Driver

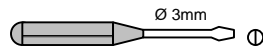

TURN OFF SUPPLY BEFORE WORKING ON ANY ELECTRICAL CONNECTION

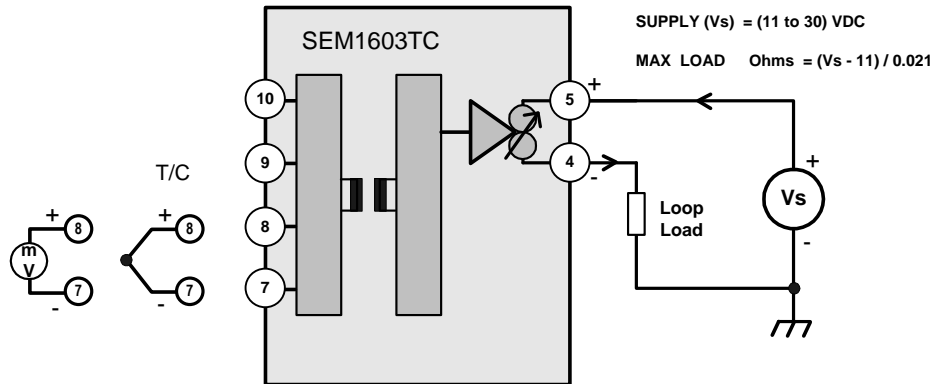

### INPUT CONNECTION

For cable lengths < 3 meters shielded or twisted pair is not required.  
For cable lengths > 3 meters and < 30 meters shielded or twisted pair is required.  
Cable lengths > 30 meters are not recommended.  
Inputs of all three wires must be equal length (resistance).

### OUTPUT

2 Wire (4-20) mA  
Max cable length 1000 meters  
Use twisted pair cable > 30 meters