

## SEM213/P USER GUIDE

DIN RAIL PUSH BUTTON TRANSMITTER  
 RTD INPUT  
 TWO WIRE (4 to 20) mA OUTPUT



**Important - Please read this document before any installing.**

Every effort has been taken to ensure the accuracy of this document, however we do not accept responsibility for damage, injury, loss or expense resulting from errors and omissions, and we reserve the right of amendment without notice.

 
### IMPORTANT - CE & SAFETY REQUIREMENTS

Product must be mounted, inside a suitable enclosure providing environmental protection to IP65 or greater.  
 To maintain CE EMC requirements, input wires must be less than 30 meters.  
 The product contains no serviceable parts, or internal adjustments. no attempt must be made to repair this product. Faulty units must be returned to supplier for repair.  
 This product must be installed by a qualified person. All electrical wiring must be carried out in accordance with the appropriate regulations for the place of installation.  
 Before attempting any electrical connection work, please ensure all supplies are switched off.

**ABSOLUTE MAXIMUM CONDITIONS** ( To exceed may cause damage to the unit ) :-  
 Supply Voltage  $\pm 30$  V dc (Protected for over voltage and reverse connection)  
 Current with over voltage  $\pm 100$  mA  
 Input Voltage  $\pm 3$  V between any terminals  
 Ambient Temperature (-4 to 158) °F Humidity (10 to 95) % RH (Non condensing)


## ELECTRICAL INSTALLATION

**TURN OFF SUPPLY BEFORE WORKING ON ANY ELECTRICAL CONNECTION**





**INPUT CONNECTION**  
 Pt100 wire must be equal length and type .  
 To maintain CE compliance cable length must be less than 30 Meters, and cables must be internal to the building.

**OUTPUT CONNECTION**  
 Use twisted pair or shielded cables for cable lengths greater than 30 Meters. Max cable length 1000 Meters. Ensure loop is grounded at one point.

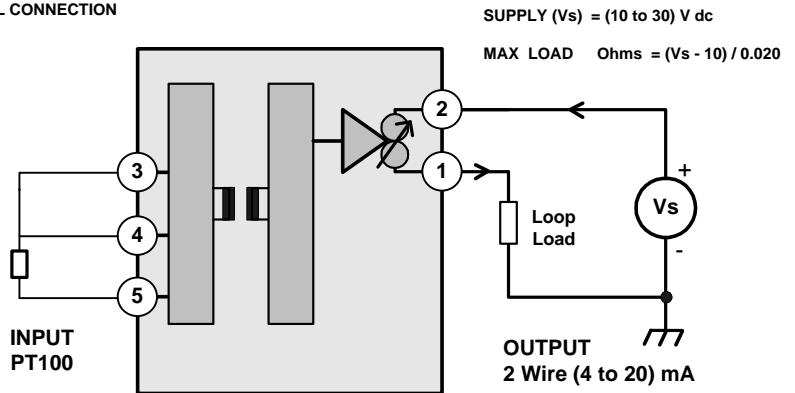

## MECHANICAL INSTALLATION

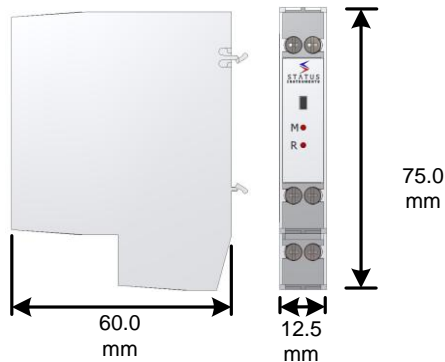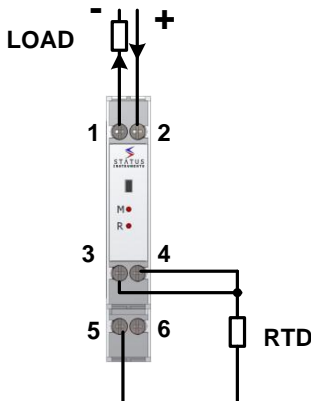

## 1.0 SPECIFICATION

Please refer to SEM213P data sheet for full specification available at [www.statinst.com](http://www.statinst.com)

## 2.0 RECEIVE AND UNPACK

Please inspect the packaging and instrument thoroughly for any signs of transit damage. If the instrument has been damaged please notify your supplier immediately.

## 3.0 USER RANGING

The transmitter may be purchased pre-configured, if specified at the time of order. User ranging is provided to allow the temperature range of the transmitter to be set to a custom range. This configuration level cannot change the input type. If the input type or other parameters require change, then please refer to the advances configuration section. To confirm input type set on the transmitter is correct for your application, count the number of flashes of the range "R" LED at power up then refer to the chart in "Menu 1 Input type" to establish the type set.

The push button is located under the slot in the key hole label, the slot is located above the menu "M" LED. To press the button use a 3 mm screw driver (flat blade), inserted into the slot. The button has a slight click action.

It may be worth noting at this stage the advance user configuration provides the user with the option of selecting fixed ranges, this may be a more attractive option if a suitable range is available, as no calibration equipment will be required.

Configuration will require the following tools and equipment :-

- DC Supply (12 to 30) V @ 30 mA
- Precision Resistance Box to simulate RTD (Do not use electronic calibrator)
- Connecting wire
- Screw driver flat blade 3mm wide
- Resistance tables for the sensor type to be used

To re-range the temperature scale, follow the following instructions:-

- Connect resistance box to SEM213P input terminals using correct cables.
- Connect the output terminals to the DC supply, observe polarity.
- Turn DC supply on.
- Set Resistance Box to the required low scale temperature (resistance). Note Range "R" LED if on indicates input connection error or input out of range, please check input.
- Allow 1 minute warm up period.
- To "Enter" ranging, press and hold the push button until Range "R" LED flashes at a slow rate.
- The "R" LED will flash at a slow rate for approximately one second during which period the low scale range is stored. Once the store is complete the "R" LED will flash at a medium rate indicating the transmitter is ready to store the high range setting. Release button.
- Set the resistance box to the required high range temperature (resistance) and allow ten seconds.
- Press and release button to store high range setting, the "R" LED will flicker for one second before the transmitter returns to normal operation. The transmitter is now re-ranged.

## 4.0 ADVANCED USER CONFIGURATION

The advanced user configuration option is based on five menus, each menu Sets a different parameter:-

- Menu 1 Selects one of eight RTD input types
- Menu 2 Selects either custom user range or one of seven fixed ranges
- Menu 3 Selects the output direction sensor burnout
- Menu 4 Provide User trim at 4 mA and 20 mA.
- Menu 5 Reset to factory default setting

The advance configuration menus are navigated using the push button, menu "M" LED and range "R" LED. The push button is located underneath the slot in the key hole label, located just above the "M" LED. To press the button use a 3 mm screw driver (flat blade) inserted into the slot. The button has a slight click action.

Three commands are used to navigate menus, performed by clicking the button as follows:-

- Advance Single button press or click
- Escape or change direction Double press or click within 0.5 seconds
- Enter Press and hold button > two seconds

When a menu is selected the "M" LED will flash a burst of 1 to 5 flashes, the number of flashes represents the menu number.

Note the range "R" LED will only operate when a selected menu has been entered, then the "R" LED uses a series of flashes or toggle flash rates to indicate the state or stage of the open menu.

### Navigating the menus (Read all of this section before attempting configuration)

To access the advanced user menus press and hold down the button during SEM213P power up. The advance user menus will now be enabled and remain enabled until transmitter power is removed. Note the "USER RANGING" level will not be active at this stage, the push button will now serve to navigate "advance user menus" as follows:-

To "enter" menus press and hold button for > 2 seconds. The "M" LED will then starts to flash, rate one flash per burst (indicating menu 1).

To "advance" to the next menu use single button press, the "M" LED will advance to two flashes per burst, indicating menu 2 is selected. Repeated single presses will advance the menu, once menu 5 is reached, the next press will returns to menu 1, for a repeat cycle around the menus.

To "escape" from menus back to normal operation use a double click of the button or remove transmitter power. Note menus have no timeout escape and therefore will remain selected indefinitely.

To "enter" a selected menus press and hold button for two seconds, at which stage the "R" LED will start to flash between bursts of the "M" LED, indicating the state of the opened menu.

## MENUS (First Select the required menu and open as described above.)

### Menu 1 Input type

On Entry "M" LED single flash every burst (menu 1), followed by a burst of between 1 to 8 "R" LED flashes, flash count represents the input type as listed below. Timeout is 10 seconds so be sure to act quickly if the type needs changing.

"R" LED flashes	Input Type
1	PT100 IEC Alpha 0.003851
2	PT100 IPTS-68 Alpha 0.00391
3	PT100 IPTS-68 Alpha 0.00392
4	Ni100 Alpha 0.00618
5	Ni120 Alpha 0.00672
6	Cu100 Alpha 0.00427
7	Cu53
8	( 10 to 400 ) ohms

Single button press to "advance" to the next input type, when type 8 is reached the next "advance" will cycle back to type 1. To ensure valid indication of input menu, allow one to two burst cycle after "advance", before counting the "R" LED flashes. Once the desired type is selected, allow 10 seconds with no button action, the transmitter will then store the selected input type, (indicated by flicker of "R" LED) before return back to normal operation.

### Menu 2 Fixed ranges

On "Entry" the "M" LED flashes twice every burst (menu2), followed by a "R" LED flashes between 1 to 8 , flash count represents the range selected as described below. Timeout is 10 seconds so be quick to act.

Range 1 is allocated for the user custom push button set range. When a new custom range (see USER RANGING) is entered, the range selected will automatically return to 1.

Range "R" LED flashes	Inputs PT100 (°C)	Input Ni100 Cu53 (°C)	Inputs Ni120 Cu100 (°C)	Input ohms
1	User Ranged			
2	0 to 50	0 to 50	0 to 50	0 to 50
3	0 to 100	0 to 100	0 to 100	0 to 100
4	0 to 200	0 to 150	0 to 150	0 to 150
5	0 to 500	0 to 180	0 to 260	0 to 200
6	-20 to 40	-20 to 40	-20 to 40	0 to 250
7	-30 to 70	-30 to 70	-30 to 70	0 to 300
8	-100 to 100	-50 to 100	-50 to 100	0 to 400

Single button press to "advance" to the next range, once range 8 is reached, the next "advance" will cycle range back to 1. To ensure valid indication of range menu, allow one to two burst cycle after "advance", before counting flashes. Once the desired range is selected allow for 10 seconds with no button action, the transmitter will then store new range (indicated by flicker of "R" LED) before returning to normal operation.

### Menu 3 Burnout Selection

On "Entry" - "M" LED, three flash every burst (menu 3), followed by a "R" LED toggle flash, either at a slow rate (every second) or a faster medium rate. Be quick to act as timeout is 10 seconds.

Slow rate indicated low scale burnout, fast rate indicates upscale burnout.

To "advance" to the other burnout direction press button.

To store new setting allow 10 seconds with no button action, the burn out selection menu will then timeout, store new setting, (indicated by a flicker of the "R" LED), before returning back to normal operation.

### Menu 4 User trim

**This menu allows the user to trim the output current at zero and span, (similar function to trim potentiometers) and is very useful for trimming out sensor errors.**

**The input of the transmitter must be connected to either a Resistance Box or a sensor held at a known temperature. The (4 to 20) mA loop current will also need to be monitored with a current meter. This menu has extended timeout of 20 seconds.**

The trim action will only operate within certain output current bands, the zero will be trimmed when the out current is between (3.8 to 6.0) mA, and the span will be trimmed when the output current is between (18.0 to 21.5) mA.

On "Entry" - "M" LED, four flash every burst (menu 4), followed by a "R" LED toggle flash, either at a slow rate (every second) or a faster medium rate.

Slow rate indicates trim direction down, while fast rate indicate trim direction up.

To "change direction" the trim direction double click button.

To trim, single press button to "advance" current by 2 uA, or press and hold button to auto advance, after two seconds the trim will adjust automatically at a rate of 3 uA per second until the button is released. Note after approximately 20 seconds of continuous button press, the auto trim rate will speed up to a rate of 10 uA per second.

To store new setting allow 20 seconds with no button action, the User Trim menu will then timeout and store any new setting(s), (indicated by a flicker of the "R" LED), before returning back to normal operation.

### Menu 5 Set factory default

On "Entry" - "M" LED, five flashes every burst (menu 5), followed by "R" LED toggle flash at a slow rate (every second).

To set factory default and zero any user trim, press button. Default setting will then be loaded and stored into the transmitter, indicated by a flicker of the "R" LED. The transmitter will then return to normal operation.

To avoid any action, allow 10 seconds with no button action, Set factory default menu will then timeout, without storing any default configuration. The transmitter will then return to normal operation.

### Default

- Input Pt100 0.003851 IEC
- Range ( 0 to 100 ) °C
- Burnout Up-Scale